Installation instructions



Install the two mount sides making sure to match the internal rail to the frame.





Insert the laser housing between the two sides of the mountings

505




Insert and tight the mount to housing fixing screws REMEMBER NOT TO **OVERTIGHT**

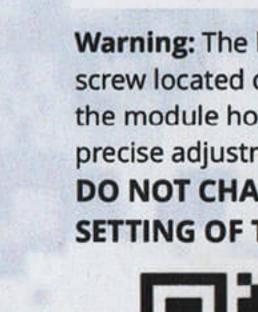

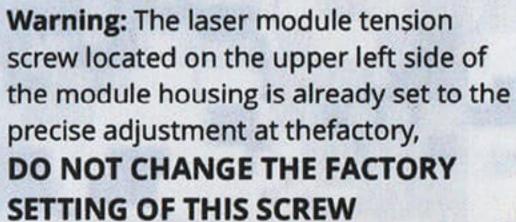



 1)Remove battery tray pulling in downwards.






QR WARRANTY REGISTRATION



Gently turn adjustment screw located at the forward right side of the device clock wise with provided wrench (small one) to drift aim point to the left, reverse procedure to bring point of aim right. Keep in mind that the point of aim must be correlative to bullet point of impact on target.

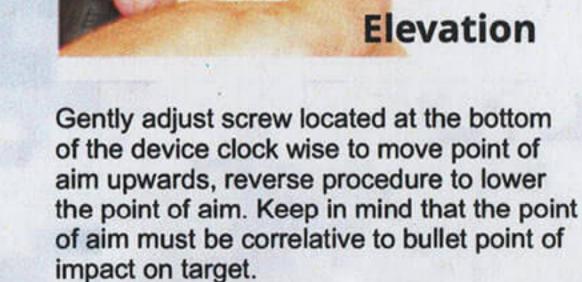

LIMITED LIFETIME WARRANTY

CAT LASERS warrants to the initially registered retail purchaser that the GLOCK LINE mounting and housing are free of defects in workmanship or material during his or her life; as long as he or she owns the product and that the laser module and electronic parts will be covered for the first twelve months from the date of purchase. if any failure to conform to these warranties becomes apparent during these periods,CAT LASERS upon return of the faulty unit will correct such nonconformity by repair or replacement of the faulty part or parts at our discretion. Correction in the manner provided above shall constitute a fullfillment of all liabilities of CAT LASERS with respect to be caused by improper installation, modification, atmospheric damage, carelessness, negligence, misuse, exposure to fluids, unauthorized repairs or failure to properly maintain the product, the warranty of the laser module is annulled if seal shows signs of removal or tampering. the foregoing warranty is exclusive and in lieu of all other warranties of quality, wherever written, oral or implied. Under no circumstances CAT LASERS and or his respresentatives shall be hold liable for any director consequential damage incurred from the use of misuse of this product.