

Installation instructions



Install laser module housing in the left mount panel snapping firmly into the internal cavity of the panel. Then install left mount and module housing on trigger guard as shown in the picture.



Hold laser housing and left mounting upwards gently while inserting right side support panel.



Insert central screw first (medium size one). **Do not over tighten.** Insert remaining screws making sure not to over tighten them.



Warning: The laser module tension screw located on the upper left side of the module housing is already set to the precise adjustment at the factory, **DO NOT CHANGE THE FACTORY SETTING OF THIS SCREW**



Windage

Gently turn adjustment screw located at the forward right side of the device clock wise with provided wrench (small one) to drift aim point to the left, reverse procedure to bring point of aim right. Keep in mind that the point of aim must be correlative to bullet point of impact on target.



Elevation

Gently adjust screw located at the bottom of the device clock wise to move point of aim upwards, reverse procedure to lower the point of aim. Keep in mind that the point of aim must be correlative to bullet point of impact on target.



1) Remove cover located in the lower part of the laser module housing
2) Replace the three batteries.
3) Tighten the cover again making sure not to over tighten it.



QR WARRANTY REGISTRATION

LIMITED LIFETIME WARRANTY

CAT LASERS warrants to the initially registered retail purchaser that the GLOCK LINE mounting and housing are free of defects in workmanship or material during his or her life; as long as he or she owns the product and that the laser module and electronic parts will be covered for the first twelve months from the date of purchase. If any failure to conform to these warranties becomes apparent during these periods, CAT LASERS upon return of the faulty unit will correct such non-conformity by repair or replacement of the faulty part or parts at our discretion. Correction in the manner provided above shall constitute a fulfillment of all liabilities of CAT LASERS with respect to be caused by improper installation, modification, atmospheric damage, carelessness, negligence, misuse, exposure to fluids, unauthorized repairs or failure to properly maintain the product, the warranty of the laser module is annulled if seal shows signs of removal or tampering, the foregoing warranty is exclusive and in lieu of all other warranties of quality, wherever written, oral or implied. Under no circumstances CAT LASERS and or his representatives shall be hold liable for any director consequential damage incurred from the use of misuse of this product.

SERIAL NUMBER:

www.cat-laser.com