



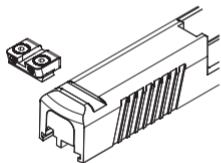

## Mounting instructions

1. Unload the gun and take out the original rear sight.

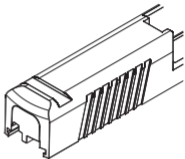

2. Loosen the screws and fit the set as indicated in the image.

3. Regulate the position when shooting and progressively tighten the screws with the Allen wrench supplied. Do not over tighten.

